

Maniglie con placche 162x51/bocchette 51 "BASSE": *fissaggio con viti a legno*

Handles with "LOW" 162x51 plates/escutcheons: *fixing with woodscrews*

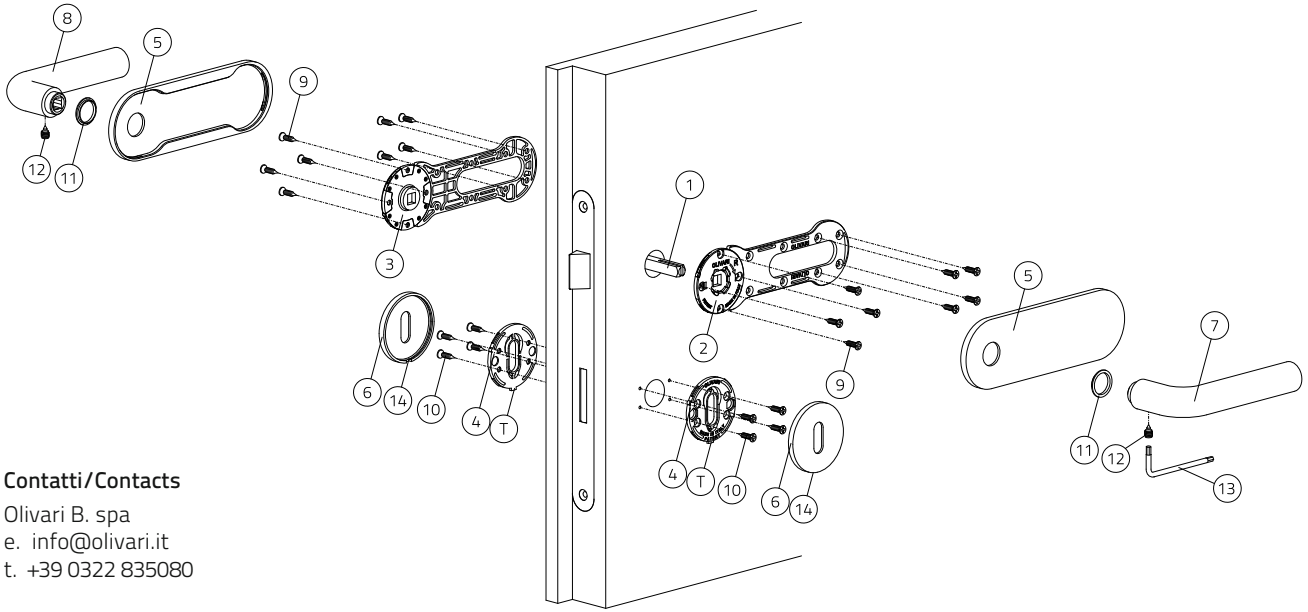

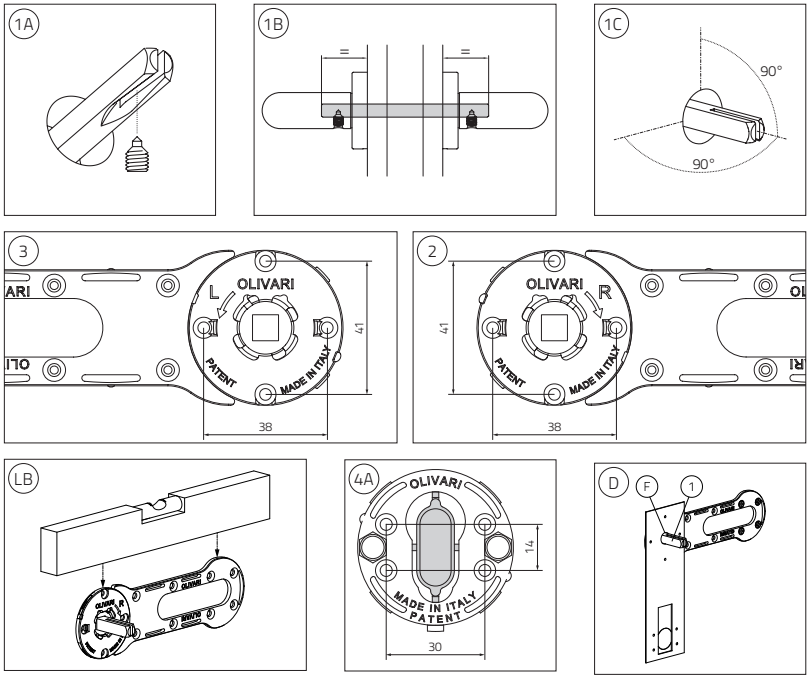

Contatti/Contacts

Olivari B. spa
e. info@olivari.it
t. +39 0322 835080

IT

- Inserire nella serratura il ferro quadro (**1**) con la svasatura rivolta verso il basso (**1A**), centrandolo rispetto allo spessore porta (**1B**).
- Lato destro: verificare attentamente che il quadro (**1**) sia posizionato perpendicolarmente rispetto al piano della porta (**1C**).
  - Inserire la sottoplacca dx (**2**) sul ferro quadro (**1**) e allinearla orizzontalmente alla porta aiutandosi con una livella a bolla o altro strumento idoneo (**LB**).
  - Fissare la sottoplacca dx tramite le viti (**9**).
  - Con bocchetta patent inserire la DIMA (**D**) (senza togliere la sottoplacca dx) sul ferro quadro (**1**) attraverso il foro (**F**) e allinearla verticalmente alla porta.
  - Segnare i 4 fori B70 o B90 per la sottobocchetta (**4**) in base alla serratura a disposizione.
  - Togliere la DIMA (**D**) e forare con una punta Ø2mm per una profondità di circa 3mm.
  - Con bocchetta yale rimuovere dalla sottobocchetta (**4**) la parte di guida centrale (**4A**) e presentare direttamente la sottobocchetta (**4**) sul cilindro e segnare i 4 fori.
- Lato sinistro: verificare attentamente che il quadro (**1**) sia posizionato perpendicolarmente rispetto al piano della porta (**1C**).
  - Inserire la sottoplacca sx (**3**) sul ferro quadro (**1**) e allinearla orizzontalmente alla porta aiutandosi con una livella a bolla o altro strumento idoneo (**LB**).
  - Fissare la sottoplacca sx tramite le viti (**9**).
  - Con bocchetta patent inserire la DIMA (**D**) (senza togliere la sottoplacca sx) sul ferro quadro (**1**) attraverso il foro (**F**) e allinearla verticalmente alla porta.
  - Segnare i 4 fori B70 o B90 per la sottobocchetta (**4**) in base alla serratura a disposizione.
  - Togliere la DIMA (**D**) e forare con una punta Ø2mm per una profondità di circa 3mm.
  - Con bocchetta yale rimuovere dalla sottobocchetta (**4**) la parte di guida centrale (**4A**) e presentare direttamente la sottobocchetta (**4**) sul cilindro e segnare i 4 fori.
- Su entrambi i lati: applicare a pressione la placca (**5**) quindi applicare la bussola in nylon (**11**).
- Lato destro: inserire l'impugnatura (**7**) sul ferro quadro (**1**), mantenendolo centrato rispetto allo spessore porta (**1B**) e avvitare a fondo il grano (**12**) con la chiave (**13**).
- Lato sinistro: ripetere l'operazione con l'impugnatura (**8**).
- Su entrambi i lati: fissare la sottobocchetta (**4**) con la tacca (**T**) rivolta verso il basso tramite le viti (**10**) quindi applicare a pressione la bocchetta (**6**) con il taglio (**14**) rivolto verso il basso.

GB

- Place the spindle (**1**) in the lock with the flared routed side downwards (**1A**) and centered within the door thickness (**1B**).
- Right side: check carefully that the spindle (**1**) is positioned perpendicular to the door (**1C**).
  - Place the right inner baseplate (**2**) on the spindle (**1**) and line it up horizontally to the door with the help of a spirit level or other suitable tool (**LB**).
  - Fix the right inner baseplate with the screws (**9**).
  - With the keyhole escutcheon place the template (**D**) (without removing the right inner plate) on the spindle (**1**) through the hole (**F**) and line it up vertically to the door.
  - Mark the 4 holes B70 or B90 for the escutcheon inner baseplate (**4**) depending on the lock being used.
  - Remove the template (**D**) and drill Ø2mm holes where marked to a depth of approximately 3mm.
  - If using euro cylinder escutcheons, remove the central guide (**4A**) from the inner baseplate (**4**) then slide the inner baseplate (**4**) directly on the cylinder and mark the 4 holes.
- Left side: check carefully that the spindle (**1**) is positioned perpendicular to the door (**1C**).
  - Place the left inner baseplate (**3**) on the spindle (**1**) and line it up horizontally to the door with the help of a spirit level or other suitable tool (**LB**).
  - Fix the left inner baseplate with the screws (**9**).
  - With the keyhole escutcheon place the template (**D**) (without removing the left inner plate) on the spindle (**1**) through the hole F and line it up vertically to the door.
  - Mark the 4 holes B70 or B90 for the escutcheon inner baseplate (**4**) depending on the lock being used.
  - Remove the template (**D**) and drill Ø2mm holes where marked to a depth of approximately 3mm.
  - If using euro cylinder escutcheons, remove the central guide (**4A**) from the inner baseplate (**4**) then slide the inner baseplate (**4**) directly on the cylinder and mark the 4 holes.
- On both sides: apply pressure to the backplate covers (**5**) then fit the nylon bush (**11**).
- Right side: slide the handle (**7**) on the spindle (**1**), keeping it centered with the door thickness (**1B**) and tighten Allen screw (**12**) with the key (**13**).
- Left side: repeat the operation with the handle (**8**).
- On both sides: fix the escutcheon inner baseplate (**4**) with the tag (**T**) facing down using the screws (**10**) then apply pressure to the escutcheon covers (**6**) with the notch (**14**) facing down.

OLIVARI